

# Installation Instructions Short Throw Shifter

Fits: 1984-2006 BMW 3 Series E30, E36 & E46 1987-2006 BMW 3 Series M3 & 1996-2002 BMW 5 Series Catalog # 45126

**WORK SAFELY!** For maximum safety, perform this installation on a clean, level surface and with the engine turned off. Place blocks or wedges in front of and behind both rear wheels to prevent movement in either direction.

**CAUTION:** To avoid any possibility of bodily injury or damage to vehicle, do not attempt installation until you are confident that the vehicle is safely secured and will not move.

#### INTRODUCTION

The B&M Short Throw Shifter can be installed in less than an hour by carefully following the instructions. Read all instructions first to familiarize yourself with the parts and procedures. This kit contains all the parts necessary to install the shifter.


This B&M Short Throw Shifter has been designed to work on most BMW E30, E36, E46, and E39 including M3 models equipped with a manual transmission. It has been engineered to greatly reduce shift throw and improve shifter feel. Part Number 45126 is an isolated version of the race shifter, damping some of the vibration and noise associated with race vehicles. A complete description highlighting the benefits and construction of the shifter is provided at the end of these instructions. Check the tool list on page 4 of these instructions for the tools required to install your B&M Short Throw Shifter. Installation of the B&M Short Throw Shifter can be accomplished by anyone with minimal mechanical experience.

#### DISASSEMBLY

We suggest the vehicle be allowed to cool for an hour or two before you begin since you will be working around the exhaust system.

- 1. Remove the knob from the shift lever by pulling it sharply upwards.
- 2. Unclip the shift lever boot from the center console and remove the boot over the shift lever. Where applicable, remove the foam insulation. Remove the rubber boot holding the shifter.
- 3. Raise and support the vehicle. The vehicle should be raised so there is at least 2 feet of ground clearance for ease of installation and safety. CAUTION: MAKE SURE THE VEHICLE IS RIGIDLY AND SECURELY SUPPORTED, JACK STANDS, WHEEL RAMPS OR A HOIST WORK BEST, DO NOT USE JACKS ALONE.

4. Working under the vehicle, pry the securing clip from the end of the gear selector rod pin. Remove the selector rod pin from the eye on the end of the shift lever, and set aside the washers and the securing clip as they will be reused (See Figure #1).

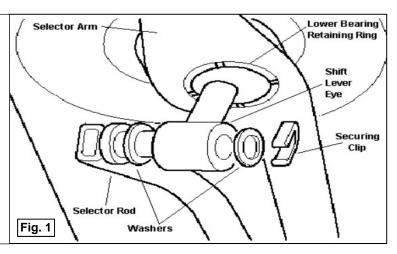

- 5. It is now necessary to release the shift lever lower bearing retaining ring from the selector arm (See Figure #1). A special BMW tool is available for this purpose, but two screwdrivers, with the tips engaged in opposite slots in the bearing ring can be used instead. To unlock the bearing ring, turn it a quarter-turn counterclockwise.
- 6. The bearing can now be pushed up through the housing, and the shift lever can be withdrawn from inside the vehicle.

## **ASSEMBLY**


7. The B&M Short Throw Shifter comes ready to be install in most E30, E36, E46, and E39 except M3 models. For the M3 application, there are two adjustments that must be completed prior to installation. First, use two small flat head screw drivers to adjust (much like a key ring) the spiral retaining rings to the upper groove position (See Figure #2).

**Note:** It will be necessary to move the top ring above the top groove to the upper portion where the stick bends in order to access the lower ring. The second adjustment is the installation of the M3 adapter ring. Remove the O-rings on the bottom of the lower pivot cup noting which is the upper and lower. From the bottom, completely slide the included M3 adapter ring onto the cup. Ensure the outer wall of the adapter ring is parallel with the pivot cup. Replace upper and lower O-rings. If damaged, use included replacement rings. (See Figure #4)



8. Thoroughly clean the inner portion of the gear selector arm housing. Using the supplied lithium grease, generously lubricate this area and the O-rings on the blue shifter pivot extension of the B&M Short Throw Shifter.

9. Insert the B&M Short Throw Shifter into the gear selector arm housing. Make sure the blue shifter pivot extension sits flush in the gear selector arm housing (extra O-rings have been supplied if the installed O-rings should become damaged). Install the supplied snap ring into the bottom groove of the shifter pivot extension using the external snap ring pliers. Verify that the snap ring has fully engaged the groove of the shifter pivot extension (See Figure #3).

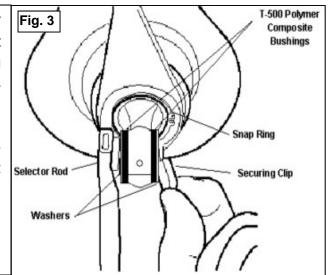


- 10. Using the supplied lithium grease, lubricate the selector rod pin. Gently insert the selector rod pin through the T-500 polymer composite bushings in the shifter and install the washers that were set aside earlier.
- 11. Reinstall the securing clip onto the groove of the rod pin (See Figure #3).
- 12. Carefully lower the vehicle and install the rubber boot (seal the boot to the stick using the supplied tie wrap if necessary), the foam insulation, the shifter boot and the shift knob. Slide the shifter through each gear, checking for binding or rough movement. If the shifter does not move smoothly, raise and support the vehicle and check that the washers are properly seated and that the linkage does not bind. DO NOT operate vehicle until each gear can be smoothly and fully engaged!

#### Parts List

- 1 B&M Short Throw Shifter
- 1 Large Snap Ring
- 1 Small Spiral Retaining Ring
- 2 Teflon Bushings
- 1 Tie Wrap
- 1 Lithium Grease Packet
- 2 O-Rings (extra)
- 1 Instruction Sheet
- 1 M3 Adapter Ring

#### Tools List

2 Medium Flat Head Screwdrivers or BMW tool
External Snap Ring Pliers
2 Small Flat Head Screwdriver
Hydraulic Jack or Hoist
Jackstands or Wheel Ramps

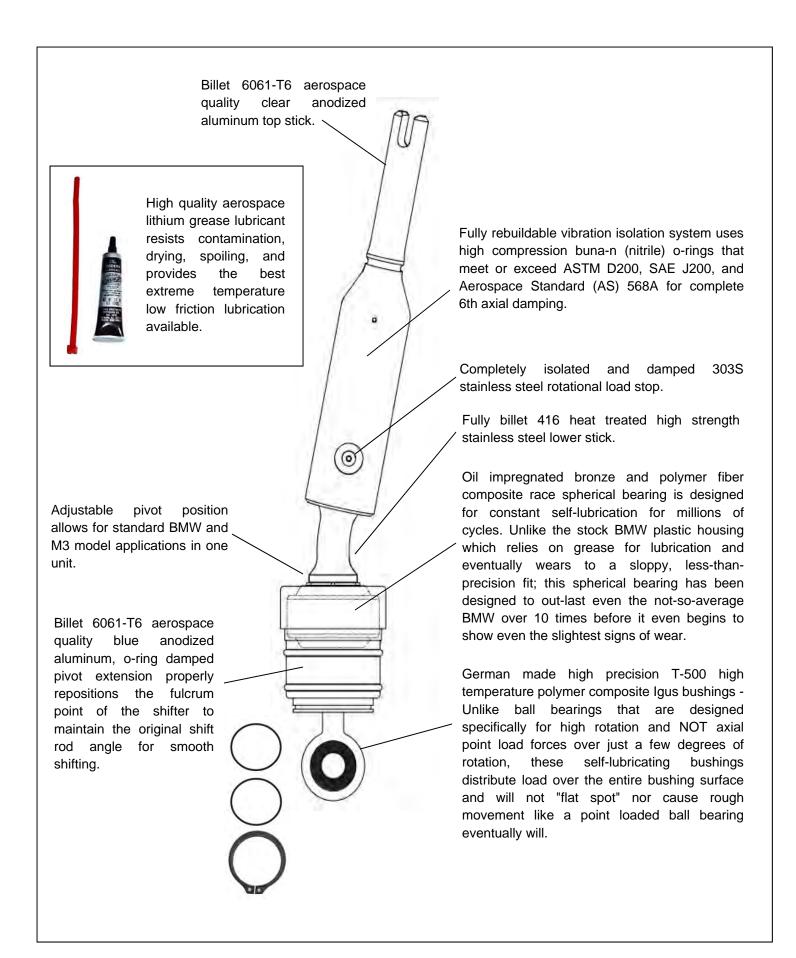

# IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

## **Technical Service**

A highly trained technical service department is maintained by Hurst Performance to answer your technical questions, provide additional product information and offer various recommendations.

Technical service calls, correspondence, and warranty questions should be directed to:



**B&M Racing & Performance Products** 

(707) 544-4761

www.bmracing.com